


# SPACING CHART

Stanhay 870 Belt Planter



Hole size up to:	Max. # of holes:
7.0	144
9.0	120
10.0	112
11.0	96
13.0	90
17.0	72
20.0	60

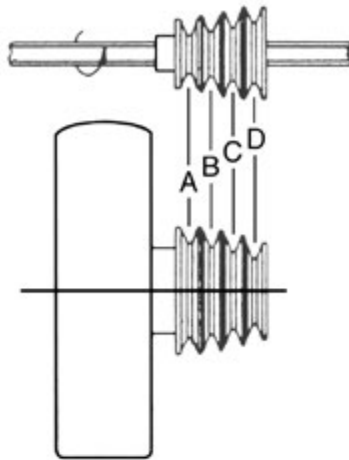

## SEED SPACING & GROUND SPEEDS

PULLEY	A	B	C	D
M.P.H. (Max.)	2	2½	3	4
SHAFT R.P.M.	60	60	60	60
NUMBER OF HOLES IN BELT				
144	.625	.731	.937	1.25
120	.75	.937	1.125	1.5
112	.8125	1.0	1.20	1.6
96	.937	1.17	1.40	1.875
90	1.0	1.25	1.5	2.0
80	1.12	1.40	1.69	2.25
72	1.25	1.56	1.875	2.5
63	1.43	1.78	2.14	2.86
60	1.5	1.875	2.25	3.0
56	1.6	2.0	2.4	3.218
54	1.67	2.07	2.50	3.33
48	1.875	2.343	2.812	3.75
45	2.0	2.5	3.0	4.0
36	2.5	3.125	3.75	5.0
32	2.81	3.50	4.22	5.62
30	3.0	3.75	4.5	6.0
28	3.218	4.0	4.825	6.421
24	3.75	4.687	5.625	7.5
20	4.5	5.625	6.75	9.0
18	5.0	6.25	7.5	10.0
16	5.625	7.0	8.437	11.25
15	6.0	7.5	9.0	12.0
14	6.437	8.0	9.625	12.875
12	7.5	9.375	11.25	15.0
10	9.0	11.25	13.5	18.0
9	10.0	12.5	15.0	20.0
8	11.25	14.0	16.875	22.5
6	15.0	18.75	22.5	30.0

